

SHAVING STAND KIT ASSEMBLY INSTRUCTIONS


Required Accessories

- 7mm Pen Mandrel
- 8.5mm drill bit
- 2 pc. bushings set RZ-PK92#-BU
- 2-part epoxy glue or insta-cure (cyanoacrylate) glue



Preparing the blank

- Cut a blank of 3/4" square to the length of the brass tube. Add 1/16" for squaring off.
- Drill the blank through the center with a 8.5mm drill bit.
- Spread glue over the tube, insert into the blank with a twisting motion to spread the glue evenly inside.
- When the glue dries, use a 7mm barrel trimmer to square the ends of the blank. Take the wood flush with the brass tube.

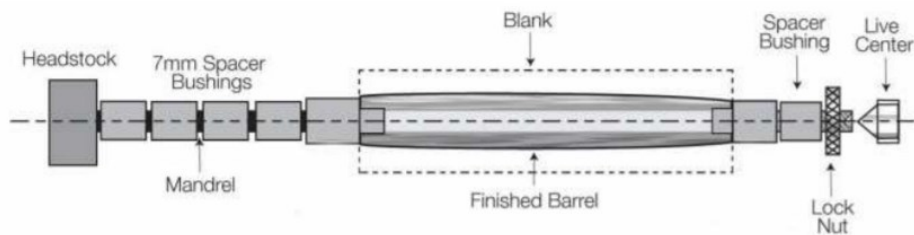


Turning The Blank

- Mount the bushings and blank onto the mandrel according to the diagram.
- Turn and the wood down to the bushings.
- Finish the wood with water proof sealer

SHAVING STAND KIT ASSEMBLY INSTRUCTIONS

diagram 'A'

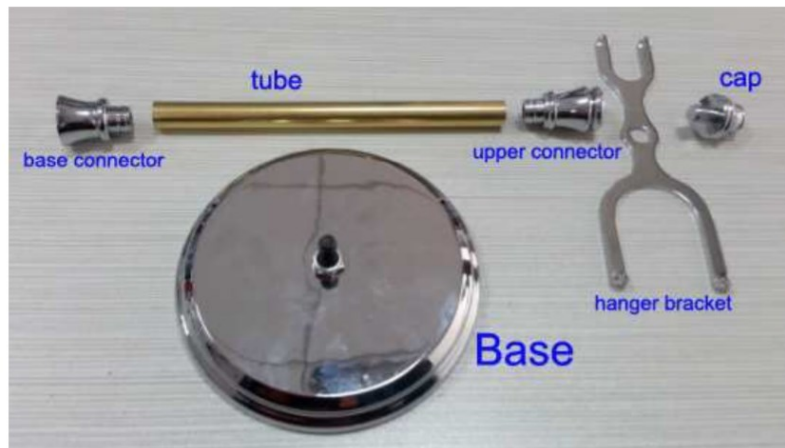

Assembly Note: Layout Finished parts according to diagram 'A'

- Press the base connector into either end of the barrel.
- Press the upper connector into the opposite end of the barrel.
- Screw the base connector to the base ,then connect other parts of the stand according to dia. "A". •
- The stand is ready for the brush and shaver handle.